


# Samson®

## POCKET COMP INSTALLATION INSTRUCTIONS

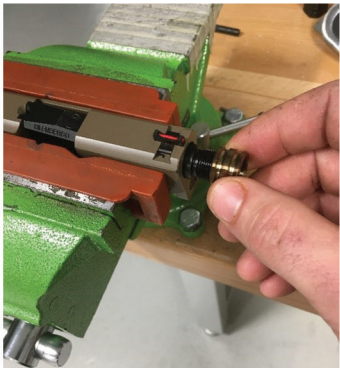

### Step 1

Remove slide from frame. Place slide into vice with soft jaws and install thread protector. Torque thread protector to 15 ft. lbs.



### Step 2

Install Pocket Comp on thread protector, ensuring it is fully seated. Align the Pocket Comp with the slide and confirm it is timed appropriately.



### Step 3

Tighten three (3) set screws to 25 in. lbs. Blue thread compound is recommended.



**Always make sure your pistol is unloaded and clear before beginning product installation.**

The **Samson Pocket Comp** should be installed by a qualified technician. Use of aftermarket accessories may void your factory warranty. Refer to your factory warranty for guidance.

**WARNING:** Shooting sports are an inherently dangerous activity. Samson is not responsible for any damage as a result of the misuse of this product.

**Samson Tech Support** is available M-F, 8-4:30p EST to answer any questions.